

| CHIP | Marca | Fab | CÓD. | REF. CHIP | REF. IMPRESSORAS |
|------|-------|-----|-----------|---|--|
| CHIP | HP | SLI | 020321001 | CHIP HP TRK/C1 CB540A/530A/310A/210A/320A/410A/380A/250A BK | HP Color LaserJet CP-1215 M-451DW M451 CM1415 CM-1415FN CP-2025 M-276NW M276 CP1510 CP-1510 CP1515 CP-1515 CP1518 CP-1518 CM1312 CM-1312 CM2320 CM-2320 CM2320N CM-2320N CM2320NF CM-2320NF CM2320MFP CM-2320MFP CP2025DN CP-2025DN M451 M-451 M276 M-276 M251N M-251N M276N M-276N M251NW M-251NW M451 M-451 M351 M-351 M475 M-475 M451DN M-451DN M451NW M-451NW M475DN M-475DN M375NW M-375NW M475DW M-475DW CM1415 CM-1415 CP1525 CP-1525 CP1415FNW CP-1415FNW CP1525NW CP-1525NW CP1415 CP-1415 CP1525 CP-1525 CM-3530 CP-3525 CM-3530FS CP-3525DN CP-3525N CP3525X CP-3525X |
| CHIP | HP | SLI | 020321002 | CHIP HP TRC/C1 CB541A/531A/311A/211A/321A/411A/381A/251A CY | HP Color LaserJet CP-1215 M-451DW M451 CM1415 CM-1415FN CP-2025 M-276NW M276 CP1510 CP-1510 CP1515 CP-1515 CP1518 CP-1518 CM1312 CM-1312 CM2320 CM-2320 CM2320N CM-2320N CM2320NF CM-2320NF CM2320MFP CM-2320MFP CP2025DN CP-2025DN M451 M-451 M276 M-276 M251N M-251N M276N M-276N M251NW M-251NW M451 M-451 M351 M-351 M475 M-475 M451DN M-451DN M451NW M-451NW M475DN M-475DN M375NW M-375NW M475DW M-475DW CM1415 CM-1415 CP1525 CP-1525 CP1415FNW CP-1415FNW CP1525NW CP-1525NW CP1415 CP-1415 CP1525 CP-1525 CM-3530 CP-3525 CM-3530FS CP-3525DN CP-3525N CP3525X CP-3525X |

| | | | | | |
|------|----|-----|-----------|--|--|
| CHIP | HP | SLI | 020321004 | CHIP HP TRM/C1 CB543A/533A/313A/213A/323A/413A/253A MA | HP Color LaserJet CP-1215 M-451DW M451 CM1415 CM-1415FN CP-2025 M-276NW M276 CP1510 CP-1510 CP1515 CP-1515 CP1518 CP-1518 CM1312 CM-1312 CM2320 CM-2320 CM2320N CM-2320N CM2320NF CM-2320NF CM2320MFP CM-2320MFP CP2025DN CP-2025DN M451 M-451 M276 M-276 M251N M-251N M276N M-276N M251NW M-251NW M451 M-451 M351 M-351 M475 M-475 M451DN M-451DN M451NW M-451NW M475DN M-475DN M375NW M-375NW M475DW M-475DW CM1415 CM-1415 CP1525 CP-1525 CP1415FNW CP-1415FNW CP1525NW CP-1525NW CP1415 CP-1415 CP1525 CP-1525 CM-3530 CP-3525 CM-3530FS CP-3525DN CP-3525N CP3525X CP-3525X |
| CHIP | HP | SLI | 020321005 | CHIP HP TRM/C1 CB542A/532A/312A/212A/322A/412A/252A YL | HP Color LaserJet CP-1215 M-451DW M451 CM1415 CM-1415FN CP-2025 M-276NW M276 CP1510 CP-1510 CP1515 CP-1515 CP1518 CP-1518 CM1312 CM-1312 CM2320 CM-2320 CM2320N CM-2320N CM2320NF CM-2320NF CM2320MFP CM-2320MFP CP2025DN CP-2025DN M451 M-451 M276 M-276 M251N M-251N M276N M-276N M251NW M-251NW M451 M-451 M351 M-351 M475 M-475 M451DN M-451DN M451NW M-451NW M475DN M-475DN M375NW M-375NW M475DW M-475DW CM1415 CM-1415 CP1525 CP-1525 CP1415FNW CP-1415FNW CP1525NW CP-1525NW CP1415 CP-1415 CP1525 CP-1525 CM-3530 CP-3525 CM-3530FS CP-3525DN CP-3525N CP3525X CP-3525X |
| CHIP | HP | SLI | 020321013 | CHIP HP Q7553A 3K | HP LaserJet P2015/2015d/2015n/2015dn/M2727 |
| CHIP | HP | SLI | 020321025 | CHIP HP Q6000A BLACK 2.5K | HP Color LaserJet 1600/2600/2605/1015/1017/CANON LBP5000/5100 |
| CHIP | HP | SLI | 020321026 | CHIP HP Q6001A CYAN 2K | |
| CHIP | HP | SLI | 020321027 | CHIP HP Q6003A MAGENTA 2K | |
| CHIP | HP | SLI | 020321028 | CHIP HP Q6002 YELLOW 2K | |
| CHIP | HP | SLI | 020321028 | CHIP HP Q6002 YELLOW 2K | |

 
| | | | | | |
|------|----|-----|-----------|--|--|
| CHIP | HP | SLI | 020321092 | CHIP HP 283 285 435 436 278 255A 364A 280A 505A 314A | HP LaserJet 283 285 435 436 278 255A 364A 280A 505A 314A |
| CHIP | HP | SLI | 020321112 | CHIP HP 283 285 435 436 278 255X 364X 280X 505X 314A | HP LaserJet 283 285 435 436 278 255X 364X 280X 505X 314A |

MARCA:  KYOCERA




| CHIP | Marca | Fab | CÓD. | REF. CHIP | REF. IMPRESSORAS |
|------|---------|-----|-----------|---------------------------------|---------------------------------------|
| CHIP | KYOCERA | SLI | 020422001 | CHIP KYOCERA TK1147 12K | Kyocera FS-1035MFP/1135MFP |
| CHIP | KYOCERA | SLI | 020422002 | CHIP KYOCERA TK137 7,2K | Kyocera KM-2810/2820 chip-US |
| CHIP | KYOCERA | SLI | 020422003 | CHIP KYOCERA TK150K BLACK 6,5K | Kyocera® FS-C1020MFP EU |
| CHIP | KYOCERA | SLI | 020422004 | CHIP KYOCERA TK150C CYAN 6K | |
| CHIP | KYOCERA | SLI | 020422005 | CHIP KYOCERA TK150M MAGENTA 6K | |
| CHIP | KYOCERA | SLI | 020422006 | CHIP KYOCERA TK150Y YELLOW 6K | |
| CHIP | KYOCERA | SLI | 020422008 | CHIP KYOCERA TK350 352 15K | Kyocera FS-3920DN/3140MFP chip-EU |
| CHIP | KYOCERA | SLI | 020422009 | CHIP KYOCERA TK360 362 20k | Kyocera FS-4020DN chip-EU |
| CHIP | KYOCERA | SLI | 020422010 | CHIP KYOCERA TK562K BLACK 12K | Kyocera FS C5300DN chip US |
| CHIP | KYOCERA | SLI | 020422011 | CHIP KYOCERA TK562C CYAN 10K | |
| CHIP | KYOCERA | SLI | 020422012 | CHIP KYOCERA TK562M MAGENTA 10K | |
| CHIP | KYOCERA | SLI | 020422013 | CHIP KYOCERA TK562Y YELLOW 10K | Kyocera FS-C5400DN chip EU |
| CHIP | KYOCERA | SLI | 020422014 | CHIP KYOCERA TK570K BLACK 16K | |
| CHIP | KYOCERA | SLI | 020422015 | CHIP KYOCERA TK570C CYAN 12K | |
| CHIP | KYOCERA | SLI | 020422016 | CHIP KYOCERA TK570M MAGENTA 12K | |
| CHIP | KYOCERA | SLI | 020422017 | CHIP KYOCERA TK570Y YELLOW 12K | Kyocera FS-C2026MFP/2126MFP/5250DN US |
| CHIP | KYOCERA | SLI | 020422018 | CHIP KYOCERA TK592K BLACK 7K | |
| CHIP | KYOCERA | SLI | 020422019 | CHIP KYOCERA TK592C CYAN 5K | |
| CHIP | KYOCERA | SLI | 020422020 | CHIP KYOCERA TK592M MAGENTA 5K | |
| CHIP | KYOCERA | SLI | 020422021 | CHIP KYOCERA TK592Y YELLOW 5K | Kyocera FS1035MFP/1135MFP US |
| CHIP | KYOCERA | SLI | 020422022 | CHIP KYOCERA TK 1142 7.2K | |
| CHIP | KYOCERA | SLI | 020422023 | CHIP KYOCERA TK 3122 21K | Kyocera FS-4200DN |

MARCA:  Lexmark

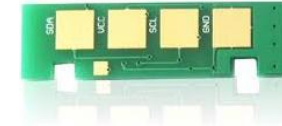

| CHIP | Marca | Fab | CÓD. | REF. CHIP | REF. IMPRESSORAS |
|------|---------|-----|-----------|---|---|
| CHIP | LEXMARK | SLI | 020521009 | CHIP LEXMARK E120 12018SL 2K | E120 E120N |
| CHIP | LEXMARK | SLI | 020521010 | CHIP LEXMARK E 230 232 240 330 332 340 6K | E230 232 240 330 332 340 |
| CHIP | LEXMARK | SLI | 020521016 | CHIP LEXMARK MS610/MX511/611 20K | MS-610 MS610DE 610DE MS610DN 610DN Lexmark MS-410 MS410DN 410DN Lexmark MS310 MS-310 MS310DN 310DN Lexmark MS-312 MS312DN 312DN Lexmark MS-315 MS315DN 315DN Lexmark MS-415 MS415DN 415DN Lexmark MS710 MS-710 MS710DN 710DN Lexmark MS510 MS-510 MS510DN 510DN |
| CHIP | LEXMARK | SLI | 020521024 | CHIP LEXMARK T 640 T644 X642 X644 21K | T 640 T644 X642 X644 |
| CHIP | LEXMARK | SLI | 020521025 | CHIP LEXMARK T 640 T644 X642 X644 32K | T 640 T644 X642 X644 |
| CHIP | LEXMARK | SLI | 020521027 | CHIP LEXMARK X203 X204 6K | X203 X204 |
| CHIP | LEXMARK | SLI | 020521028 | CHIP LEXMARK X264 X363 X364 9K | X264 X363 X364 |
| CHIP | LEXMARK | SLI | 020521029 | CHIP LEXMARK X340 X342 6K MULTIFUNCIONAL | X340 X342 |
| CHIP | LEXMARK | SLI | 020522001 | CHIP LEXMARK E260/360/460 3.5K | E260/360/460 |
| CHIP | LEXMARK | SLI | 020522004 | CHIP LEXMARK MULTIPRINTER E260/360/460/X463/464/466 15K | MULTIPRINTER E260/360/460/X463/464/466 |
| CHIP | LEXMARK | SLI | 020522005 | CHIP LEXMARK MULTIPRINTER E360/460/462/X463/464/466 9K | MULTIPRINTER E260/360/460/X463/464/467 |
| CHIP | LEXMARK | SLI | 020522007 | CHIP LEXMARK MULTIPRINTER OPTRA T/X 650/652 25K | MULTIPRINTER OPTRA T/X 650/652 |
| CHIP | LEXMARK | SLI | 020522009 | CHIP LEXMARK MULTIPRINTER OPTRA T/X 654 656 36K | MULTIPRINTER OPTRA T/X 654 656 |
| CHIP | LEXMARK | SLI | 020522014 | CHIP LEXMARK MS710/711/810/811/812 25K | MS710/711/810/811/812 |
| CHIP | LEXMARK | SLI | 020522015 | CHIP LEXMARK MS410/610 MX310/410/511/611 10K | MS410/610 MX310/410/511/611 |
| CHIP | LEXMARK | SLI | 020522016 | CHIP LEXMARK MS310/410/610 5K | MS310/410/610 |
| CHIP | LEXMARK | SLI | 020522017 | CHIP LEXMARK MICR T640/642/644 15K | MICR T640/642/644 |
| CHIP | LEXMARK | SLI | 020522018 | CHIP LEXMARK MICR T650/652/654 15K | MICR T650/652/654 |

 MARCA: **OKIDATA**

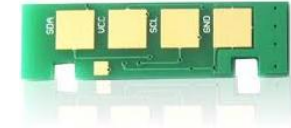

| CHIP | Marca | Fab | CÓD. | REF. CHIP | REF. IMPRESSORAS |
|------|---------|-----|-----------|--|-------------------------------------|
| CHIP | OKIDATA | SLI | 020621002 | CHIP OKIDATA C3400 3600 BK 2.5K | OKI C3600/3300/3400/3450/3530/MC360 |
| CHIP | OKIDATA | SLI | 020621003 | CHIP OKIDATA C3400 3600 CY 2K | |
| CHIP | OKIDATA | SLI | 020621004 | CHIP OKIDATA C3400 3600 MA 2K | |
| CHIP | OKIDATA | SLI | 020621005 | CHIP OKIDATA C3400 3600 YL 2K | |
| CHIP | OKIDATA | SLI | 020621012 | CHIP OKIDATA B410 B420 B430DN B480 3,5K | OKI B410/420/430/440 |
| CHIP | OKIDATA | SLI | 020621014 | CHIP OKIDATA C330 C530 MC361 MC561 BK 3.5K | OKI C330 C530 MC361 MC561 |
| CHIP | OKIDATA | SLI | 020621015 | CHIP OKIDATA C330 C530 MC361 MC561 CY 3.K | |
| CHIP | OKIDATA | SLI | 020621016 | CHIP OKIDATA C330 C530 MC361 MC561 MA 3K | |
| CHIP | OKIDATA | SLI | 020621017 | CHIP OKIDATA C330 C530 MC361 MC561 YL 3K | |
| CHIP | OKIDATA | SLI | 020621026 | CHIP OKIDATA C710 C711 BK 11K | OKI C710/C711 |
| CHIP | OKIDATA | SLI | 020621027 | CHIP OKIDATA C710 711 CY 11K | |
| CHIP | OKIDATA | SLI | 020621028 | CHIP OKIDATA C710 711 MA 11K | |
| CHIP | OKIDATA | SLI | 020621029 | CHIP OKIDATA C710 711 YL 11K | |
| CHIP | OKIDATA | SLI | 020621032 | CHIP OKIDATA C8800 UNIV TODAS AS CORES 6K | OKI C8600/8800 |
| CHIP | OKIDATA | SLI | 020622001 | CHIP OKI B4400 B4600 7K | OKI B4400/B4600 |

| | | | | | |
|------|---------|-----|-----------|---|--------------------------------------|
| CHIP | OKIDATA | SLI | 020622002 | CHIP OKIDATA B411 B431 MB491 12K | OKI B411/B431/MB491 |
| CHIP | OKIDATA | SLI | 020622003 | CHIP OKIDATA B411 B431 MB491 25K FUSE DRUM | OKI B411/B431/MB491 |
| CHIP | OKIDATA | SLI | 020622006 | CHIP OKIDATA B410 430 440 460 470 480 25K DRUM | OKI B410/430/440/460/470/480 |
| CHIP | OKIDATA | SLI | 020622008 | CHIP OKIDATA B420 430 440 MB460 MB470 MB480 7K | OKI B420/B430/B440/MB460/MB470/MB480 |
| CHIP | OKIDATA | SLI | 020622010 | CHIP OKIDATA B6500 22K | OKI B6500 |
| CHIP | OKIDATA | SLI | 020622011 | CHIP OKIDATA B710 B720 B730 15K | OKI B710/720/730 |
| CHIP | OKIDATA | SLI | 020622012 | CHIP OKIDATA B730 25K | OKI B730 |
| CHIP | OKIDATA | SLI | 020622013 | CHIP OKIDATA B420 B440 MB480 12K | OKI B420/440/460/470/480 |
| CHIP | OKIDATA | SLI | 020622014 | CHIP OKIDATA MC160 C110 C130 BK 2,5K | OKI C110/C130/MC160 |
| CHIP | OKIDATA | SLI | 020622015 | CHIP OKIDATA MC160 C110 C130 CY 1,5K | |
| CHIP | OKIDATA | SLI | 020622016 | CHIP OKIDATA MC160 C110 C130 MA 1,5K | |
| CHIP | OKIDATA | SLI | 020622017 | CHIP OKIDATA MC160 C110 C130 YL 1,5K | |
| CHIP | OKIDATA | SLI | 020622018 | CHIP OKIDATA C831 C841 MC873 BK 10K | OKI C831/C841/MC873 |
| CHIP | OKIDATA | SLI | 020622019 | CHIP OKIDATA C831 C841 MC873 CY 10K | |
| CHIP | OKIDATA | SLI | 020622020 | CHIP OKIDATA C831 C841 MC873 MA 10K | |
| CHIP | OKIDATA | SLI | 020622021 | CHIP OKIDATA C831 C841 MC873 YL 10K | |
| CHIP | OKIDATA | SLI | 020622022 | CHIP OKIDATA MPS5501 MPS5502 MPS4900 TONER 36K | OKI MPS5501/5502/4900 |
| CHIP | OKIDATA | SLI | 020622023 | CHIP OKIDATA MPS5501 MPS5502 MPS4900 DRUM 72K | OKI MPS5501/5502/4900 |
| CHIP | OKIDATA | SLI | 020622025 | CHIP OKIDATA ES5162MFP ES5112 ES4132 ES4192 12K | OKI ES4132/ES4192/ES5112/ES5162MFP |

| | | | | | |
|------|---------|-----|-----------|-------------------------------|---------------|
| CHIP | OKIDATA | SLI | 020622026 | CHIP OKIDATA C910 C930 BK 15K | OKI C910/C930 |
| CHIP | OKIDATA | SLI | 020622027 | CHIP OKIDATA C910 C930 CY 15K | |
| CHIP | OKIDATA | SLI | 020622028 | CHIP OKIDATA C910 C930 MA 15K | |
| CHIP | OKIDATA | SLI | 020622029 | CHIP OKIDATA C910 C930 YL 15K | |

MARCA: **RICOH**




| CHIP | Marca | Fab | CÓD. | REF. CHIP | REF. IMPRESSORAS |
|------|-------|-----|-----------|--|--|
| CHIP | RICOH | SLI | 020721006 | CHIP RICOH SP C810 811DN BLACK 20K | OKI C810/811DN |
| CHIP | RICOH | SLI | 020721007 | CHIP RICOH SP C810 811DN CYAN 15K | |
| CHIP | RICOH | SLI | 020721008 | CHIP RICOH SP C810 811DN MAGENTA 15K | |
| CHIP | RICOH | SLI | 020721009 | CHIP RICOH SP C810 811DN YELLOW 15K | |
| CHIP | RICOH | SLI | 020721016 | CHIP RICOH AP 400/410 15K C/ CONECTOR | Ricoh AP400/400N/401/410/410N/500 |
| CHIP | RICOH | SLI | 020721021 | CHIP RICOH SP 4510D SP4520 25K CILINDRO | Ricoh Aficio SP4520DN/MP 401SPF/Lanier MP401/Savin MP401 |
| CHIP | RICOH | SLI | 020721022 | CHIP RICOH AF SP 5200 5210 25K | Ricoh SP5200/5210 |
| CHIP | RICOH | SLI | 020721077 | CHIP RICOH SP C830 C831 BLACK 23.5K | Ricoh Aficio SP C830/831 |
| CHIP | RICOH | SLI | 020721078 | CHIP RICOH SP C830 C831 CYAN 27K | |
| CHIP | RICOH | SLI | 020721079 | CHIP RICOH SP C830 C831 MAGENTA 27K | |
| CHIP | RICOH | SLI | 020721080 | CHIP RICOH SP C830 C831 YELLOW 27K | |
| CHIP | RICOH | SLI | 020722002 | CHIP RICOH AP 600 610 2600 2610 20K | Ricoh AP600N/610N/610I/2600/2600N/2600DN//2610N |
| CHIP | RICOH | SLI | 020722003 | CHIP RICOH CL4000 SPC410 411 SPC420 CYAN 5K | Ricoh Aficio CL4000DN/SP C410/C411/420 |
| CHIP | RICOH | SLI | 020722004 | CHIP RICOH CL4000 SPC410 411 SPC420 BLACK 5K | |
| CHIP | RICOH | SLI | 020722005 | CHIP RICOH CL4000 SPC410 411 SPC420 MAGENTA 5K | |
| CHIP | RICOH | SLI | 020722006 | CHIP RICOH CL4000 SPC410 411 SPC420 YELLOW 5K | |
| CHIP | RICOH | SLI | 020722007 | CHIP RICOH MPC2031 2051 2531 2551 BK 10K | Ricoh AFICIO MP C2031/2051/2531/2551 |
| CHIP | RICOH | SLI | 020722008 | CHIP RICOH MPC2031 2051 2531 2551 CYAN 9.5K | |
| CHIP | RICOH | SLI | 020722009 | CHIP RICOH MPC2031 2051 2531 2551 MAGENTA 9.5K | |
| CHIP | RICOH | SLI | 020722010 | CHIP RICOH MPC2031 2051 2531 2551 YELLOW 9.5K | |
| CHIP | RICOH | SLI | 020722011 | CHIP RICOH SP 310FN 310DN 310SFN 311 6,4K | Ricoh SP310FN/310DN/310SFN/311 |
| CHIP | RICOH | SLI | 020722013 | CHIP RICOH SP 3500 3510 6,4K | Ricoh Aficio SP 3500/3510 |
| CHIP | RICOH | SLI | 020722015 | CHIP RICOH SP 4100N 4110 4210 4310 15K C/ CONECTOR | Ricoh Aficio SP4100N/4100N-KP/4110N-KP/4210N/4310Nchip SP4100L |

| | | | | | |
|------|-------|-----|-----------|--|--|
| CHIP | RICOH | SLI | 020722016 | CHIP RICOH SP 4510DN SP4510SF SP4520DN 12K | Ricoh SP4510DN/SF |
| CHIP | RICOH | SLI | 020722021 | CHIP RICOH SP C231/232/242 BLACK 6K | RICOH Aficio SP C231SF/232/310/311/323/C242SF |
| CHIP | RICOH | SLI | 020722022 | CHIP RICOH SP C231/232/242 CYAN 6K | |
| CHIP | RICOH | SLI | 020722023 | CHIP RICOH SP C231/232/242 MAGENTA 6K | |
| CHIP | RICOH | SLI | 020722024 | CHIP RICOH SP C231/232/242 YELLOW 6K | |
| CHIP | RICOH | SLI | 020722025 | CHIP RICOH SP C250/252 BLACK 6K | Ricoh SP C252DN(C252C) High Capacity |
| CHIP | RICOH | SLI | 020722026 | CHIP RICOH SP C250/252 CYAN 6K | |
| CHIP | RICOH | SLI | 020722027 | CHIP RICOH SP C250/252 MAGENTA 6K | |
| CHIP | RICOH | SLI | 020722028 | CHIP RICOH SP C250/252 YELLOW 6K | |
| CHIP | RICOH | SLI | 020722029 | CHIP RICOH SP C430/431 DN BK 24K | Ricoh SP C430/431DN |
| CHIP | RICOH | SLI | 020722030 | CHIP RICOH SP C430/431 DN CY 21K | |
| CHIP | RICOH | SLI | 020722031 | CHIP RICOH SP C430/431 DN MA 21K | |
| CHIP | RICOH | SLI | 020722032 | CHIP RICOH SP C430/431 DN YL 21K | |
| CHIP | RICOH | SLI | 020722037 | CHIP RICOH MP401 SP4520 18K | Ricoh Aficio SP4520DN/MP 401SPF/Lanier MP401/Savin MP401 |
| CHIP | RICOH | SLI | 020722038 | CHIP RICOH MPC300 400 BK 10K | Ricoh Afico MP C300/300SR/400/400SR |
| CHIP | RICOH | SLI | 020722039 | CHIP RICOH MPC300 400 CY 10K | |
| CHIP | RICOH | SLI | 020722040 | CHIP RICOH MPC300 400 MA 10K | |
| CHIP | RICOH | SLI | 020722041 | CHIP RICOH MPC300 400 YL 10K | |
| CHIP | RICOH | SLI | 020722047 | CHIP RICOH MPC3002 3502 BK 28K | Ricoh Aficio MPC3002/MPC3502 |
| CHIP | RICOH | SLI | 020722048 | CHIP RICOH MPC3002 3502 CY 18K | |
| CHIP | RICOH | SLI | 020722049 | CHIP RICOH MPC3002 3502 YL 18K | |
| CHIP | RICOH | SLI | 020722050 | CHIP RICOH MPC3002 3502 MA 18K | Ricoh MP C2800/3300 |
| CHIP | RICOH | SLI | 020722051 | CHIP RICOH MPC2800 3300 BK 20K | |
| CHIP | RICOH | SLI | 020722052 | CHIP RICOH MPC2800 3300 CY 15K | |
| CHIP | RICOH | SLI | 020722053 | CHIP RICOH MPC2800 3300 YL 15K | |
| CHIP | RICOH | SLI | 020722054 | CHIP RICOH MPC2800 3300 MA 15K | Ricoh SP 5300DN/SP 5310DB/MP 501DPF/MP 601SPF |
| CHIP | RICOH | SLI | 020722055 | CHIP RICOH SP5300 5310 MP501 601 25K | |
| CHIP | RICOH | SLI | 020722056 | CHIP RICOH MPC3003 3503 BK 29.5K | |
| CHIP | RICOH | SLI | 020722057 | CHIP RICOH MPC3003 3503 CY 18K | Ricoh Aficio 2003SP/2503SP/2011 |
| CHIP | RICOH | SLI | 020722057 | CHIP RICOH MPC3003 3503 CY 18K | Ricoh Aficio 3003sp/3503sp |

| | | | | | |
|------|-------|-----|-----------|---|--|
| CHIP | RICOH | SLI | 020722058 | CHIP RICOH MPC3003 3503 YL 18K | Ricoh Aficio 4503sp/5503sp/6003sp EX JPN |
| CHIP | RICOH | SLI | 020722059 | CHIP RICOH MPC3003 3503 MA 18K | |
| CHIP | RICOH | SLI | 020722060 | CHIP RICOH MPC305 BLACK 12K | Ricoh Aficio MPC305spf EX JPN |
| CHIP | RICOH | SLI | 020722061 | CHIP RICOH MPC305 CYAN 4K | |
| CHIP | RICOH | SLI | 020722062 | CHIP RICOH MPC305 MAGENTA 4K | |
| CHIP | RICOH | SLI | 020722063 | CHIP RICOH MPC305 YELLOW 4K | |
| CHIP | RICOH | SLI | 020722072 | CHIP RICOH SP377 6.4K | Ricoh SP377DNwX/SP377SFNwX/SP377SNwX |
| CHIP | RICOH | SLI | 020722073 | CHIP RICOH MPC306 406 BLACK 17K | Ricoh Aficio MPC306/MPC406 |
| CHIP | RICOH | SLI | 020722074 | CHIP RICOH MPC306 406 CYAN 6K | |
| CHIP | RICOH | SLI | 020722075 | CHIP RICOH MPC306 406 MAGENTA 6K | |
| CHIP | RICOH | SLI | 020722076 | CHIP RICOH MPC306 406 YELLOW 6K | |
| CHIP | RICOH | SLI | 020722077 | CHIP RICOH MPC2003SP 2004 2503SP 2504 BK 15K | Ricoh MPC2003sp/2004/2503sp/2504/2011,Lainer MPC 2003/2004/2503/2504, Savin MPC2003/2004/2503/2504 |
| CHIP | RICOH | SLI | 020722078 | CHIP RICOH MPC2003SP 2004 2503SP 2504 CY 9.5K | |
| CHIP | RICOH | SLI | 020722079 | CHIP RICOH MPC2003SP 2004 2503SP 2504 YL 9.5K | |
| CHIP | RICOH | SLI | 020722080 | CHIP RICOH MPC2003SP 2004 2503SP 2504 MA 9.5K | |

 MARCA: **xerox** 

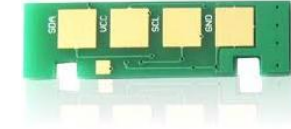


| CHIP | Marca | Fab | CÓD. | REF. CHIP | REF. IMPRESSORAS |
|------|-------|-----|-----------|---|---|
| CHIP | XEROX | SLI | 021021006 | CHIP XEROX PHASER 3010 3040 3045 3045 2.2K | Xerox Phaser 3010/3040/WC3045 |
| CHIP | XEROX | SLI | 021021009 | CHIP XEROX PHASER 3150B 5K | Xerox Phaser 3150 |
| CHIP | XEROX | SLI | 021021010 | CHIP XEROX PHASER 3140 3160 2.5K | Xerox Phaser 3140/3155/3160 |
| CHIP | XEROX | SLI | 021021011 | CHIP XEROX PHASER 3200 3K | Xerox Phaser 3200MFP |
| CHIP | XEROX | SLI | 021021012 | CHIP XEROX PHASER 3250 5K | Xerox Phaser 3250 |
| CHIP | XEROX | SLI | 021021013 | CHIP XEROX WORKCENTRE 3215 3225 PHASER 3052 3260 3K TONER | Xerox WorkCentre 3215/3225 Phaser 3260/3052 |
| CHIP | XEROX | SLI | 021021014 | CHIP XEROX WORKCENTRE 3215 3225 PHASER 3052 3260 10K DRUM | Xerox WorkCentre 3215/3225 Phaser 3260/3053 |
| CHIP | XEROX | SLI | 021021015 | CHIP XEROX PHASER 3300MFP 8K | Xerox Phaser 3300MFP |
| CHIP | XEROX | SLI | 021021016 | CHIP XEROX PHASER 3320 10K | Xerox Phaser 3320 |
| CHIP | XEROX | SLI | 021021017 | CHIP XEROX PHASER 3420B 3425 10K | Xerox Phaser 3420/3425 |
| CHIP | XEROX | SLI | 021021019 | CHIP XEROX PHASER 3435 10K | Xerox Phaser 3435 |
| CHIP | XEROX | SLI | 021021021 | CHIP XEROX PHASER 3500 12K | Xerox Phaser 3500 |
| CHIP | XEROX | SLI | 021021022 | CHIP XEROX PHASER 3550 11K | Xerox Phaser 3550 |
| CHIP | XEROX | SLI | 021021023 | CHIP XEROX PHASER 3600 14K | Xerox Phaser 3600 |
| CHIP | XEROX | SLI | 021021026 | CHIP XEROX PHASER 4510 19K | Xerox Phaser 4510 |
| CHIP | XEROX | SLI | 021021041 | CHIP XEROX PHASER 6180 BLACK 8K | Xerox Docuprint 6180 |
| CHIP | XEROX | SLI | 021021042 | CHIP XEROX PHASER 6180 CYAN 6K | |
| CHIP | XEROX | SLI | 021021043 | CHIP XEROX PHASER 6180 MAGENTA 6K | |
| CHIP | XEROX | SLI | 021021044 | CHIP XEROX PHASER 6180 YELLOW 6K | |
| CHIP | XEROX | SLI | 021021051 | CHIP XEROX WORKCENTER 3220 WC3210 4,1K | Xerox WC 3210/3220 |
| CHIP | XEROX | SLI | 021021052 | CHIP XEROX WORKCENTRE 3315 5K | Xerox WC 3315/3325 |
| CHIP | XEROX | SLI | 021021055 | CHIP XEROX WORKCENTRE 3325 11K | Xerox WC 3325 |

| | | | | | |
|------|-------|-----|-----------|---|--|
| CHIP | XEROX | SLI | 021021057 | CHIP XEROX WORKCENTRE 4150 20K | Xerox WC 4150 |
| CHIP | XEROX | SLI | 021021061 | CHIP XEROX WORKCENTRE 4250 4260 25K | Xerox WC 4250/4260 |
| CHIP | XEROX | SLI | 021021064 | CHIP XEROX WORKCENTRE 6500 6505 BLACK 2.5K | Xerox Docuprint 6500 |
| CHIP | XEROX | SLI | 021021065 | CHIP XEROX WORKCENTRE 6500 6505 CYAN 2.5K | |
| CHIP | XEROX | SLI | 021021066 | CHIP XEROX WORKCENTRE 6500 6505 MAGENTA 2.5K | |
| CHIP | XEROX | SLI | 021021067 | CHIP XEROX WORKCENTRE 6500 6505 YELLOW 2.5K | |
| CHIP | XEROX | SLI | 021021071 | CHIP XEROX WORKCENTRE 4250 4260 80K DRUM | Xerox WC 4250/4260 |
| CHIP | XEROX | SLI | 021021072 | CHIP XEROX WORKCENTRE 5222 5225 5230 50K DRUM | Xerox WorkCentre 5222/5225/5230 |
| CHIP | XEROX | SLI | 021021073 | CHIP XEROX PHASER 4600 4620 13K TONER | Xerox Phaser 4600/4620 |
| CHIP | XEROX | SLI | 021021074 | CHIP XEROX PHASER 4600 4620 30K DRUM | Xerox Phaser 4600/4620 |
| CHIP | XEROX | SLI | 021021075 | CHIP XEROX WORKCENTRE 7525 7530 7535 7545 7556 7855 BLACK 26K | Xerox WC7525/7530/7535/7545/7556/7855/7830/7835/7845 |
| CHIP | XEROX | SLI | 021021076 | CHIP XEROX WORKCENTRE 7525 7530 7535 7545 7556 7855 CYAN 15K | |
| CHIP | XEROX | SLI | 021021077 | CHIP XEROX WORKCENTRE 7525 7530 7535 7545 7556 7855 MAGENTA 15K | |
| CHIP | XEROX | SLI | 021021078 | CHIP XEROX WORKCENTRE 7525 7530 7535 7545 7556 7855 YELLOW 15K | |
| CHIP | XEROX | SLI | 021021079 | CHIP XEROX PHASER 7800 BK 17K | Xerox Phaser 7800 |
| CHIP | XEROX | SLI | 021021080 | CHIP XEROX PHASER 7800 CYAN 17K | |
| CHIP | XEROX | SLI | 021021081 | CHIP XEROX PHASER 7800 MAGENTA 17K | |
| CHIP | XEROX | SLI | 021021082 | CHIP XEROX PHASER 7800 YELLOW 17K | |
| CHIP | XEROX | SLI | 021021083 | CHIP XEROX WORKCENTRE 5222 5225 5230 20K TONER | Xerox WorkCentre 5222/5225/5230 |
| CHIP | XEROX | SLI | 021021084 | CHIP XEROX PHASER 6700 BK 18K | Xerox Phaser 6700 |
| CHIP | XEROX | SLI | 021021085 | CHIP XEROX PHASER 6700 CY 12K | |
| CHIP | XEROX | SLI | 021021086 | CHIP XEROX PHASER 6700 MA 12K | |
| CHIP | XEROX | SLI | 021021087 | CHIP XEROX PHASER 6700 YL 12K | |

| | | | | | |
|------|-------|-----|-----------|---|-----------------------------------|
| CHIP | XEROX | SLI | 021021088 | CHIP XEROX WORKCENTRE 3020 3025 1.5K | Xerox WC 3020/3025 |
| CHIP | XEROX | SLI | 021021089 | CHIP XEROX PHASER 7500 BLACK 17.8K | Xerox Phaser 7500 |
| CHIP | XEROX | SLI | 021021090 | CHIP XEROX PHASER 7500 CYAN 17.8K | |
| CHIP | XEROX | SLI | 021021091 | CHIP XEROX PHASER 7500 MAGENTA 17.8K | |
| CHIP | XEROX | SLI | 021021092 | CHIP XEROX PHASER 7500 YELLOW 17.8K | |
| CHIP | XEROX | SLI | 021021093 | CHIP XEROX PHASER 3320 5K | Xerox Phaser 3320 |
| CHIP | XEROX | SLI | 021021094 | CHIP XEROX PHASER 3610 3615 25.3K | Xerox Phaser 3610 WorkCentre 3615 |
| CHIP | XEROX | SLI | 021021095 | CHIP XEROX PHASER 3610 3615 3655 85K DRUM | Xerox Phaser 3610 WorkCentre 3615 |
| CHIP | XEROX | SLI | 021021097 | CHIP XEROX PHASER 4600 4620 30K TONER | Xerox Phaser 4600/4620 |
| CHIP | XEROX | SLI | 021021098 | CHIP XEROX PHASER 3610 3615 14.1K | Xerox Phaser 3610 WorkCentre 3615 |

 
MARCA: **SAMSUNG**

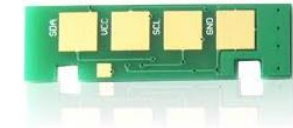

| CHIP | Marca | Fab | CÓD. | REF. CHIP | REF. IMPRESSORAS |
|------|---------|-----|-----------|--|--|
| CHIP | SAMSUNG | SLI | 020821013 | CHIP SAMSUNG CLT-K 406 BLACK 1.5K | Samsung CLP-360/362/363/364/365/365W/366/367W/368CLP-366W SL-C410W/C460W Samsung CLX-3300/3302/3303/3303FW/3304/3305/3305W/3305FW/3305FN/3306/3307FW |
| CHIP | SAMSUNG | SLI | 020821014 | CHIP SAMSUNG CLT-C 406 CYAN 1.5K | |
| CHIP | SAMSUNG | SLI | 020821015 | CHIP SAMSUNG CLT-M 406 MAGENTA 1.5K | |
| CHIP | SAMSUNG | SLI | 020821016 | CHIP SAMSUNG CLT-Y 406 YELLOW 1.5K | |
| CHIP | SAMSUNG | SLI | 020821017 | CHIP SAMSUNG CLP610 660 BK 5.5K | Samsung CLP-610/660/CLX-6200/6210/6240 |
| CHIP | SAMSUNG | SLI | 020821018 | CHIP SAMSUNG CLP610 660 CYAN 5K | |
| CHIP | SAMSUNG | SLI | 020821019 | CHIP SAMSUNG CLP610 660 MAGENTA 5K | |
| CHIP | SAMSUNG | SLI | 020821020 | CHIP SAMSUNG CLP610 660 YELLOW 5K | |
| CHIP | SAMSUNG | SLI | 020821021 | CHIP SAMSUNG CLP770 775 609 BLACK 7K | Samsung CLP-770ND/775ND EXP |
| CHIP | SAMSUNG | SLI | 020821022 | CHIP SAMSUNG CLP770 775 609 CYAN 7K | |
| CHIP | SAMSUNG | SLI | 020821023 | CHIP SAMSUNG CLP770 775 609 MAGENTA 7K | |
| CHIP | SAMSUNG | SLI | 020821024 | CHIP SAMSUNG CLP770 775 609 YELLOW7K | |
| CHIP | SAMSUNG | SLI | 020821025 | CHIP SAMSUNG D101 1.5K | Samsung ML2160/2165/2160W/2164W/2165W/2168W SCX3400/3405/3407/3400F SCX3405F/3400FW/3405FW/761P |
| CHIP | SAMSUNG | SLI | 020821026 | CHIP SAMSUNG D103 2.5K | Samsung ML-2950/2951/2955/SCX-4705/4729FW/4728FD/4729F |
| CHIP | SAMSUNG | SLI | 020821027 | CHIP SAMSUNG D111 2K | |
| CHIP | SAMSUNG | SLI | 020821028 | CHIP SAMSUNG D116 3K | Samsung Xpress SL-M2625/2626/2825/2826/2675/2676/2875/2876/2676N/2676FH/ 2876HN/ 2626D/2826ND/2875ND |
| CHIP | SAMSUNG | SLI | 020821030 | CHIP SAMSUNG D203 15K | |
| CHIP | SAMSUNG | SLI | 020821031 | CHIP SAMSUNG R204 30K DRUM | Samsung ProXpress SL-M3325/3825/4025, M3375/3875/4075 |
| CHIP | SAMSUNG | SLI | 020821033 | CHIP SAMSUNG D204 5K | Samsung ProXpress SL-M3325/3825/4025, M3375/3875/4075 |
| CHIP | SAMSUNG | SLI | 020821034 | CHIP SAMSUNG D307 60K DRUM | |
| CHIP | SAMSUNG | SLI | 020821035 | CHIP SAMSUNG D307 20K C/ PLUG | Samsung ML4510ND/4512ND/5010/5012ND/5015ND/5017ND |

| | | | | | |
|------|---------|-----|-----------|--|---|
| CHIP | SAMSUNG | SLI | 020821038 | CHIP SAMSUNG D104 1.5K | Samsung ML-1660/1661/1665/1860/1675/1685/2950/SCX-3200/3201/3206/3205/3208 |
| CHIP | SAMSUNG | SLI | 020821043 | CHIP SAMSUNG ML2850 ML2851 5K | Samsung ML-2850D/2851ND |
| CHIP | SAMSUNG | SLI | 020821045 | CHIP SAMSUNG D305 15K | Samsung ML3750/3753 |
| CHIP | SAMSUNG | SLI | 020821046 | CHIP SAMSUNG ML4050N ML4551N ML4550N 20K | Samsung SCX- 4550/4551/4050 |
| CHIP | SAMSUNG | SLI | 020821050 | CHIP SAMSUNG SCX 4200 3K | Samsung SCX-4200 |
| CHIP | SAMSUNG | SLI | 020821052 | CHIP SAMSUNG D105 2.5K | Samsung1910/1911/1915/2525/2580/2581/SCX4623/4600/4601/4606/CF650 |
| CHIP | SAMSUNG | SLI | 020821053 | CHIP SAMSUNG SCX4520 SCX4720F 5K | Samsung SCX-4720FN/4520 |
| CHIP | SAMSUNG | SLI | 020821055 | CHIP SAMSUNG D209 5K | Samsung SCX4824/4826/4828/ML2855 |
| CHIP | SAMSUNG | SLI | 020821056 | CHIP SAMSUNG SCX 5530 - 8K | Samsung SCX-5530/5330N/5530FN |
| CHIP | SAMSUNG | SLI | 020821057 | CHIP SAMSUNG D208 10K | Samsung SCX-5635/5835/ML-1635/3475 |
| CHIP | SAMSUNG | SLI | 020821058 | CHIP SAMSUNG D205 5K | Samsung ML3310/3710/SCX4833/SCX5637/SCX5737 |
| CHIP | SAMSUNG | SLI | 020821059 | CHIP SAMSUNG D205 10K | Samsung ML3710/SCXSCX5637/SCX5738 |
| CHIP | SAMSUNG | SLI | 020821064 | CHIP SAMSUNG SCX6555 SCX6545 25K | Samsung SCX-6545/6555 |
| CHIP | SAMSUNG | SLI | 020821065 | CHIP SAMSUNG SCX6555 SCX6545 80K | Samsung SCX-6545/6555 |
| CHIP | SAMSUNG | SLI | 020821066 | FUSIVEL SAMSUNG ML 1610 ML 2010 SCX 4521 | Samsung 63MA MLT-D119S Samsung ML-1610/2010/2510/2570/2571N,SCX-4321 |
| CHIP | SAMSUNG | SLI | 020821067 | CHIP SAMSUNG CLT506 BLACK 6K | Samsung CLP-680/680DW/680DN Samsung CLX-6260FR/6260FD/6260FW//6260ND/6260NR |
| CHIP | SAMSUNG | SLI | 020821068 | CHIP SAMSUNG CLT506 CYAN 6K | |
| CHIP | SAMSUNG | SLI | 020821069 | CHIP SAMSUNG CLT506 YELLOW 6K | |
| CHIP | SAMSUNG | SLI | 020821070 | CHIP SAMSUNG CLT506 MAGENTA 6K | |
| CHIP | SAMSUNG | SLI | 020822002 | CHIP SAMSUNG D309 30K | Samsung ML5510/5510D/6510/6510N |
| CHIP | SAMSUNG | SLI | 020822003 | CHIP SAMSUNG MLT-D201 20K | Samsung ProXpress M4030ND/M4080FX |
| CHIP | SAMSUNG | SLI | 020822004 | CHIP SAMSUNG D303 40K | Samsung SL-M4580FX |
| CHIP | SAMSUNG | SLI | 020822006 | CHIP SAMSUNG D358S 30K | Samsung SL-M5370LX/M4370 |

 MARCA: **SHARP**

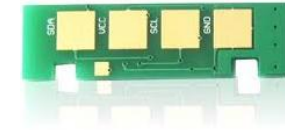

| CHIP | Marca | Fab | CÓD. | REF. CHIP | REF. IMPRESSORAS |
|------|-------|-----|-----------|------------------------|-------------------------------|
| CHIP | SHARP | SLI | 020922001 | CHIP SHARP AL204TD 6K | Sharp AL2021/2031/2041/2051 |
| CHIP | SHARP | SLI | 020922002 | CHIP SHARP MX M200 16K | Sharp MX-M200 MXM200 MX-206NT |
| CHIP | SHARP | SLI | 020922003 | CHIP SHARP MX 235 | Sharp MX 235 |